# <u>User's Manual for Advanced Axial Flux</u> <u>Synchronous Motors and Generators</u>







## Contents

1. Technical data of EMRAX motors	6
EMRAX 188 Technical Data Table	11
EMRAX 208 Technical Data Table (dynamometer test data)	12
EMRAX 228 Technical Data Table (dynamometer test data)	14
EMRAX 268 Technical Data Table (dynamometer test data)	16
EMRAX 348 Technical Data Table	20
2. Intended usage of the EMRAX motor/generator	21
3. Motor types and additional motor parts	21
4. Order codes, tariff (HTS) codes, weights of EMRAX motors and additional motor parts	24
5. 3D drawings of EMRAX motors	26
6. Mounting the motor	26
7. Power/torque transmission and shafts	27
8. Controlling direction, position and rotation speed of EMRAX motors	32
9. Suitable controllers for EMRAX motors	36
10. Two same sized EMRAX motors connected serially (EMRAX TWIN) – stacking capability of EMRAX motors	38
11. Redundancy	40
12. EMRAX motor working as a generator and its integration into the hybrid system	41
13. EMRAX motor ingress protection (IP CODE)	41
14. Motor cooling	42
15. EMRAX motor materials, quality and reliability	44
16. EMRAX motor bearings and life expectancy	45
17. EMRAX motors as in-wheel motors	47
18. Maintenance and protection of EMRAX motor against environmental disturbances	47
19. Starting EMRAX motor (connecting the motor with controller):	48
20. How to choose the correct EMRAX motor type for every application:	50
21. Usage of EMRAX motors for electric vehicles (EV)	51
How to calculate power and torque for EV?	51
Mounting options of EMRAX motor for electric car:	52
Example of calculation for electric Audi ETT:	53
22. EMRAX Certificates	54
23. EMRAX disclaimer	54
24. Service	55



## Table of Figures

Figure 1: EMRAX testing at Letrika d.d. Company	5
Figure 2: Scheme of EMRAX motor	5
Figure 3: EMRAX 188 drawing	6
Figure 4: EMRAX 208 drawing	6
Figure 5: EMRAX 208 (IP65)	7
Figure 6: EMRAX 228 drawing	7
Figure 7: EMRAX 228 (IP21)	7
Figure 8: EMRAX 268 drawing	8
Figure 9: EMRAX 268 (IP21)	8
Figure 10: EMRAX Very High Mechanical Loads (VHML) drawing	9
Figure 11: EMRAX 348 drawing	9
Figure 12: EMRAX 348 (IP65) with encoder	10
Figure 13: Mounting holes on front and back side of the motor	26
Figure 14: Mounting options (air propeller / in-wheel)	26
Figure 15: EMRAX transmission shafts	28
Figure 16: Standard motor shaft vs. extended shaft with outer splines (ESO)	28
Figure 17: ESO and FSI	28
Figure 18: Standard motor shaft vs. EMRAX 268 VHML shaft	29
Figure 19: FSI	29
Figure 20: EMRAX with ESO and FSI	29
Figure 21: Power/torque transmission from front motor side	30
Figure 22: Power/torque transmission from front (FSI) and/or back motor side (ESO)	30
Figure 23: Power/torque transmission from front motor side to the transmission gear	31
Figure 24: Motor with extended shaft from back motor side	31
Figure 25: Resolver / encoder on back motor side	32
Figure 26: Resolver / encoder on front motor side	33
Figure 27: Encoder with bracket	33
Figure 28: Resolver with bracket	34
Figure 29: EMRAX with hall sensors	34
Figure 30: Motor phase connectors – normal (UVW) and doubled (2xUVW)	35
Figure 31: EMRAX TWIN drawing	38
Figure 32: EMRAX TWIN with encoder	39
Figure 33: EMRAX TWIN with tandem resolver	39
Figure 34: Coolant fittings for EMRAX TWIN	39
Figure 35: EMRAX TWIN shafts – ESO is mounted in the first motor and FSI on the front side of the second motor	40
Figure 36: Motor with extended shaft and flanged shaft on the extended shaft (for EMRAX TWIN)	40
Figure 37: EMRAX IP21	41
Figure 38: EMRAX IP65	42
Figure 39: Motor cooling options	42
Figure 40: Motor coolant fittings for one motor	43
Figure 41: Combinations of bearings for EMIRAX motors	45
Figure 42: Pull-push (PP) bearing outer ring fixation	47
Figure 43: Straight connection of motor phase connectors to controller cables.	48
Figure 44: Angular connection of motor connectors to controller cables. Connections must be isolated with shrink hose!	49
Figure 45: Isolation of electrical phase connectors with shrink hose	49



#### Dear Customer,

Congratulations on your purchase of the EMRAX high performance electric motor.

This drive is a Slovenian product of a completely new type of pancake axial flux synchronous permanent magnet electric motor, which will keep its capability for a long time if treated properly. It can also work as a generator with the same performance characteristics. The drive was developed for airplanes, where reliability is extremely important. Therefore, our target was to build a reliable, low weight, high power direct drive electric motor with high efficiency.

The drive was developed and tested by Roman Sušnik, dipl. ing. (Company EMRAX d.o.o., till March 2016 company name was Enstroj d.o.o.). The first prototype was mounted onto the glider airplane Apis EA2 in 2008, when also the 1st electric flight in Slovenia and the 3<sup>rd</sup> in the world was made. The motor was also laboratory tested in Piktronik d.o.o (January 2011), Siemens GmbH (May 2012) and Letrika d.d. (November 2014). Furthermore, our customers give us test results from their projects to confirm our test data. In February 2014 thermal tests were performed on EMRAX motors. The motor was exposed to shock tests from -40°C to +160°C for 17 days (24h/day), this means 408 hours non-stop. EMRAX passed this examination with excellent results, without any damages.

Meaning of EMRAX name:

- EM stands for the Electric Motor,
- R is the first letter of the innovator's name, who is Roman
- AX stand for the axial magnetic flux

EMRAX motor features:

- Axial Flux
- Permanent magnet synchronous motor
- Input type: sinusoidal three phase
- Lightweight best in class power density (up to 9kW/kg)
- High torque at low RPM
- Highly efficient (up to 98% at x kW and x RPM)
- Reliable (developed and produced for the airplane industry)
- Compact and high-quality product
- IP21 or IP65
- EMC Compliant E marked (complies with essential protection requirements of 89/336/EEC)
- Low cost
- 3 Cooling options (Air/Liquid/Combined)
- Low noise
- No vibrations
- Stacking capability (two same sized motors connected on the same shaft)

The EMRAX engine can achieve high power even at relatively low rotation speeds due to high torque. It allows a gearless drive without the usual step-down gear unit which causes power losses, additional weight, complexity and maintenance. In the case where the lower output rotation is needed the reduction drive can be used, which allows even higher torque (power stays the same).

The EMRAX motor ranks as the best high power density motor in the global market. Its power density is very high - 8-9 kW/kg. EMRAX motors have the best-in-class power density. The mechanical and no load electrical loses are very small, so EMRAX can run on high RPM – in which case very high motor power can be achieved (up to 300 kWp – e.g. EMRAX 348 type). EMRAX motors use less material more efficiently to provide higher power densities than any comparable motor or generator.

Though many intensive tests have already been made and despite the parts being produced by modern CNC machines, the motor is still not a real series product. Many manufacturing processes are still made by hand, which makes every drive unique. Therefore, our customers are and will be part of the field test, thus we are already excited about the experiences they will make with the new motor.

EMRAX engines have been sold since the year 2008. Through the years of experiences we have made many improvements. The<br/>development is a never ending story, therefore improvements will still be made. The customer assumes responsibility to share<br/>www.emrax.comwww.emrax.comVersion 4.2 / October 2016



the experiences made with the drive with the manufacturer, in order for the manufacturer to gather the know-how and identify possible weaknesses.

The usage of EMRAX motors is in automotive, motorsport, off road, marine, industrial, aerospace applications.

The orders are rising monthly, consequently we are prepared to raise the production quantity by multiplying the existing production cells and also start mass production. Even though motors are not made in high volumes, the advanced materials and proprietary construction techniques enable significant customer cost benefits. Therefore EMRAX motors have a very competitive price in their class.

Applications where EMRAX motors can be used:

- Traction motors for on, off-road, rail and marine transport (hybrid or full electric).
- Generators (especially where size and weight are important).
- Integrated starter Generators (ISG) (start, generate and power boost from a small volume).
- Hydraulic replacement (compact and efficient alternatives for hydraulic motors and starters).



Figure 1: EMRAX testing at Letrika d.d. Company



Figure 2: Scheme of EMRAX motor



## 1. Technical data of EMRAX motors

EMRAX motors/generators are **advanced axial flux synchronous (BLAC) electric motors/generators**. EMRAX motors are available in a range of torque and speed combinations and with variety of cooling options. EMRAX motor types (the number in the name means the diameter of the motor in mm):

**EMRAX 188:** is being developed. It will be available for sale at the end of 2016. Orders are being collected.

- High Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Medium Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Low Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)



Figure 3: EMRAX 188 drawing

EMRAX 208: In production.

- High Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Medium Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Low Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)



Figure 4: EMRAX 208 drawing





Figure 5: EMRAX 208 (IP65)

#### EMRAX 228: In production.

- High Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Medium Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Low Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)



Figure 6: EMRAX 228 drawing







**Figure 7: EMRAX 228 (IP21)** Version 4.2 / October 2016



### EMRAX 268: In production.

- High Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Medium Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Low Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- \*Customisations: EMRAX 268 Very High Mechanical Loads (VHML)



being t02007200 - Front bearing is for male forces, back bearing is for axial-radial forces. Bearing combination is for mode (for e.g. at propertie). Bearing et0202500 - Front bearing is for radial forces, back bearing is for axial-radial forces. Bearing combination is for bearing et0202500 - Front bearing is for radial forces, back bearing is for axial-radial forces. Bearing combination is for EMRAX 268 500Nmp 200kW at 4000RPM, weight 20kg

Figure 8: EMRAX 268 drawing





Figure 9: EMRAX 268 (IP21)







Figure 10: EMRAX Very High Mechanical Loads (VHML) drawing. EMRAX VHML Low Voltage needs doubled phase connectors (2xUVW).

**EMRAX 348**: Prototype is being tested. It will be available for sale at the end of 2016. Orders are being collected.

- High Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Medium Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)
- Low Voltage (Air Cooled / Liquid Cooled (IP65) / Combined Cooled (IP21)



Figure 11: EMRAX 348 drawing





Figure 12: EMRAX 348 (IP65) with encoder

#### CUSTOM MADE EMRAX MOTORS

- Customized winding:

For different voltages: Low-Medium Voltage (LMV)

For different speeds (RPM): for very low speeds and high torque at low motor current

- Customized motor shaft:

Hollow shaft with bigger diameter of the hole

Shaft with multi splines

- Special bearings for different magnitude and orientation of the force

- Doubled phase connectors (UVW):

One motor can be fitted with two controllers to gain enough motor current. In this case the motor also has a redundancy option.

- Longer phase connectors (UVW): up to 150 mm

- Phase connectors on the opposite side (on the left side instead on the right side)

- Customized weight: lighter motors



#### **EMRAX 188 Technical Data Table**

It will be available for sale at the end of 2016. Orders are being collected.

Туре		EMRAX 188 High Voltage		EMRAX 188 Medium Voltage			EMRAX 188 Low Voltage		
Technical data									
Air cooled = AC	40	10		40	10		40	10	
Combined cooled = Air + Liquid cooled = CC	AC	i.c		AC	LC .		AC	LC.	
Ingress protection	IP21	IP65	IP21	IP21	IP65	IP21	IP21	IP65	IP21
Cooling medium specification	11 21	11 05	11 21	11 21	11 05	11 21	11 21	11 05	
(Air Flow = AF; Inlet Water/glycol Flow =		M/E-Ol/min	WE-Ol/min		M/E-Ol/min	M/E-Ol/min		M/E-Ol/min	M/F-Ol/main
WF; Ambient Air = AA)	AF=20m/s;	at 50°C:	at 50°C:	AF=20m/s;	at 50°C:	at 50°C:	AF=20m/s;	at 50°C:	at 50°C:
If inlet WF temperature and/or AA	AA=25°C	AA=25°C	AA=25°C	AA=25°C	AA=25°C	AA=25°C	AA=25°C	AA=25°C	AA=25°C
power is higher.									
Weight [kg]	7,2	7,4	7,4	7,2	7,4	7,4	7,2	7,4	7,4
Diameter ø / width [mm]					188 / 77				
Maximal battery voltage [Vdc] and full	250 \	de (5050/7700		220 1	dc (6210/7700		90 V/	de (7200/7000	
load/no load RPM	550 V	uc (5950/770c	( RPIVI)	230 V	uc (0210/7700	(RPIVI)	90 00	uc (7200/7900	npivi)
Peak motor power at max RPM (few min at					70				
cold start / few seconds at not start) [kw]									
RPM) depends on the motor RPM [kW]	15 - 28	15 - 30	17 - 32	15 - 28	15 - 30	17 - 32	15 - 28	15 - 30	17 - 32
Maximal rotation speed [RPM]				6000 (770	D peak for a fe	w seconds)			
Maximal motor current (for 2 min if cooled		200		·			800		
as described in Manual) [Arms]		200		320			800		
Continuous motor current [Arms]		100		160			400		
Maximal peak motor torque [Nm]				100					
Continuous motor torque [Nm]				50					
Torque / motor current [Nm/1Aph rms]		0,50			0,32			0,12	
Maximal temperature of the copper				120					
temperature of the magnets [°C]				120					
Motor efficiency [%]					92-98%				
Internal phase resistance at 25 °C [mΩ]		/		/				/	
Input phase wire cross-section [mm <sup>2</sup> ]		10,2		15,2			38		
Wire connection				star					
Induction Ld/Lq [µH]		/		/			/		
Controller / motor signal					sine wave				
AC voltage between two phases [Vrms/1RPM]		/		/			/		
Specific idle speed (no load RPM) [RPM/1Vdc]		22		33			88		
Specific load speed (depends on the controller settings) [RPM/1Vdc]	17 – 22			27 – 33			80 - 88		
Magnetic field weakening (for higher RPM at the same power and lower torque) [%]					up to 100				
Magnetic flux – axial [Vs]		/			/			/	
Temperature sensor in the motor				kty 81/210					
Number of pole pairs					10				
Rotor Inertia (mass dia=160mm, m=4,0kg) [kg*cm²]					/				
Bearings (front:back) - SKF/FAG	6204:6204 propeller	(for radial forc or 6204:3204	es) or 6204:72 I (for axial-radi	04 (for axial-ra al forces; for p	idial forces; for ull-push mode (exceptionally)	r pull mode; fo ; »O« orientati )	cusing on very on, α=25°); ot	high axial load her bearings ar	, e.g. for air e possible

\*Graphs for EMRAX 188 will be made in the end of 2016.



## EMRAX 208 Technical Data Table (dynamometer test data)

Туре		EMRAX 208 High Voltage		Π	EMRAX 208 Medium Voltag	;e	EMRAX 208 Low Voltage		
Technical data									
Air cooled = AC Liquid cooled = LC Combined cooled = Air + Liquid cooled = CC	AC	LC	cc	AC	LC	cc	AC	LC	cc
Ingress protection	IP21	IP65	IP21	IP21	IP65	IP21	IP21	IP65	IP21
Cooling medium specification (Air Flow = AF; Inlet Water/glycol Flow = WF; Ambient Air = AA) If inlet WF temperature and/or AA temperature are lower, then continuous power is higher.	AF=20m/s; AA=25°C	WF=8I/min at 50°C; AA=25°C	WF=8I/min at 50°C; AA=25°C	AF=20m/s; AA=25°C	WF=8l/min at 50°C; AA=25°C	WF=8I/min at 50°C; AA=25°C	AF=20m/s; AA=25°C	WF=8I/min at 50°C; AA=25°C	WF=8l/min at 50°C; AA=25°C
Weight [kg]	9,1	9,4	9,3	9,1	9,4	9,3	9,1	9,4	9,3
Diameter ø / width [mm]					208 / 85				
Maximal battery voltage [Vdc] and full load/no load RPM	470 V	dc (5170/7050	RPM)	320 V	dc (5760/7040	RPM)	125 V	dc (6250/7250	RPM)
Peak motor power at max RPM (few min at cold start / few seconds at hot start) [kW]					80				
Continuous motor power (at 3000-5000 RPM) depends on the motor RPM [kW]	20 - 32	20 - 32	25 - 40	20 - 32	20 - 32	25 - 40	20 - 32	20 - 32	25 - 40
Maximal rotation speed [RPM]				6000 (700	0 peak for a fe	w seconds)			
Maximal motor current (for 2 min if cooled as described in Manual) [Arms]		200		320			800		
Continuous motor current [Arms]	100			160			400		
Maximal peak motor torque [Nm]					150				
Continuous motor torque [Nm]					80				
Torque / motor current [Nm/1Aph rms]		0,83		0,54			0,20		
Maximal temperature of the copper windings in the stator and max. temperature of the magnets [°C]					120				
Motor efficiency [%]					92-98%				
Internal phase resistance at 25 $^\circ$ C [m $\Omega$ ]		12,0		5,7			0,8		
Input phase wire cross-section [mm <sup>2</sup> ]		10,2		15,2			38		
Wire connection				star					
Induction Ld/Lq [μH]		125/130			52/56		7,2/7,5		
Controller / motor signal					sine wave				
AC voltage between two phases [Vrms/1RPM]		0,0487		0,0319			0,0117		
Specific idle speed (no load RPM) [RPM/1Vdc]		15		22			58		
Specific load speed (depends on the controller settings) [RPM/1Vdc]	11 – 15			18 – 22				50 - 58	
Magnetic field weakening (for higher RPM at the same power and lower torque) [%]					up to 100				
Magnetic flux – axial [Vs]	0,0393				0,0257			0,095	
Temperature sensor in the motor					kty 81/210				
Number of pole pairs					10				
Rotor Inertia (mass dia=160mm, m=4,0kg) [kg*cm²]					256				
Bearings (front:back) - SKF/FAG	6206:6206 propeller	(for radial forc ) or 6206:3206	es) or 6206:72 (for axial-radi	06 (for axial-ra al forces; for p	adial forces; for ull-push mode (exceptionally	r pull mode; fo ; »O« orientati )	cusing on very on, α=25°); ot	high axial load her bearings ar	, e.g. for air e possible





#### Graphs valid for EMRAX High Voltage Combined Cooled (CC) motor type:

#### Graphs of the EMRAX 208 Medium and Low voltage motor type:

Graphs of EMRAX 208 Low Voltage and EMRAX 208 Medium Voltage are similar to graphs of EMRAX 208 High Voltage. The only differences are the DC voltage and motor current. These two parameters can be read from the Technical data table for the EMRAX 208 Low and Medium Voltage motor.

Low Voltage motor needs 4 x higher motor current and 4 x lower DC voltage for the same power/torque and RPM, compared to EMRAX 208 High Voltage motor.

<u>Medium Voltage</u> motor needs 1.52 x higher motor current and 1/3 lower DC voltage for the same power/torque and RPM, compared to EMRAX 208 High Voltage motor.

#### Graphs of the EMRAX 208 Liquid cooled (LC) and EMRAX 208 Air Cooled (CC):

Continuous power of the liquid cooled or air cooled motor is 20% lower than continuous power of the combined cooled motor. The peak power is the same. Data is presented in the Technical Data Table.



## EMRAX 228 Technical Data Table (dynamometer test data)

Type Technical data		EMRAX 228 High Voltage		EMRAX 228 Medium Voltage			EMRAX 228 Low Voltage		
Air cooled = AC Liquid cooled = LC Combined cooled = Air + Liquid cooled = CC	AC	LC	сс	AC	LC	сс	AC	LC	сс
Ingress protection	IP21	IP65	IP21	IP21	IP65	IP21	IP21	IP65	IP21
Cooling medium specification (Air Flow = AF; Inlet Water/glycol Flow = WF; Ambient Air = AA) If inlet WF temperature and/or AA temperature are lower, then continuous power is higher.	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8I/mi n at 50°C; AA=25°C
Weight [kg]	12,0	12,3	12,3	12,0	12,3	12,3	12,0	12,3	12,3
Diameter ø / width [mm]					228/86				
Maximal battery voltage [Vdc] and full load/no load RPM	670 Vo	dc (5300/6500	) RPM)	470 V	dc (5170/6500	RPM)	130 Vo	dc (4400/5200	RPM)
Peak motor power at max RPM (few min at cold start / few seconds at hot start) [kW]					100				
Continuous motor power (at 3000-5000 RPM) depends on the motor RPM [kW]	28 - 42	28 - 42	35 - 55	28 - 42	28 - 42	35 - 55	28 - 42	28 - 42	35 - 55
Maximal rotation speed [RPM]				5500 (6500 R	PM peak for a	few seconds)			
Maximal motor current (for 2 min if cooled as described in Manual) [Arms]		240		340			900		
Continuous motor current [Arms]	115			160			450		
Maximal motor torque (for a few seconds) [Nm]					240				
Continuous motor torque [Nm]					125				
Torque / motor current [Nm/1Aph rms]		1,1		0,75				0,27	
Maximal temperature of the copper windings in the stator and max. temperature of the magnets [°C]					120				
Motor efficiency [%]					92 – 98				
Internal phase resistance at 25 $^{\circ}\text{C}\left[\text{m}\Omega\right]$		18			8,0		1,12		
Input phase wire cross-section [mm <sup>2</sup> ]		10,2			15,2		38		
Wire connection					star				
Induction in Ld/Lq [µH]		177/183			76/79			10,3/10,6	
Controller / motor signal					sine wave				
AC voltage between two phases [Vrms/1RPM]		0,0730			0,0478			0,0176	
Specific idle speed (no load RPM) [RPM/1Vdc]		9,8			14			40	
Specific load speed (depends on the controller settings) [RPM/1Vdc]	8 - 9,8			11 - 14			34 – 40		
Magnetic field weakening (for higher RPM at the same power and lower torque) [%]				up to 100					
Magnetic flux – axial [Vs]		0,0542			0,0355			0,0131	
Temperature sensor in the motor				kty 81/210					
Number of pole pairs					10				
Rotor inertia (mass dia=175mm, m=5,5kg) [kg*cm²]					421				
Bearings (front:back) - SKF/FAG	6206:6206 ( air prope	for radial forc ller) or 6206:	es) or 6206:72 3206 (for axia	206 (for axial-r l-radial forces;	radial forces; for for pull-push	or pull mode; mode; »O« or	focusing on ve ientation, α=2	ery high axial lo 25°); other bea	oad, e.g. for wings are



#### Graphs valid for EMRAX 228 High Voltage Combined Cooled (CC):



#### Graphs of the EMRAX 228 Medium and Low voltage motor type:

Graphs of EMRAX 228 Low Voltage and EMRAX 228 Medium Voltage are similar to graphs of EMRAX 228 High Voltage. The only differences are the DC voltage and motor current. These two parameters can be read from the Technical data table for the EMRAX 228 Low and Medium Voltage motor.

Low Voltage motor needs 4 x higher current and 4 x lower DC voltage for the same power/torque and RPM, compared to EMRAX 228 High Voltage motor.

<u>Medium Voltage</u> motor needs 1.52 x higher motor current and 1/3 lower DC voltage for the same power/torque and RPM, compared to EMRAX 228 High Voltage motor.

#### Graphs of the EMRAX 228 Liquid cooled (LC) and EMRAX 228 Air Cooled (CC):

Continuous power of the liquid cooled or air cooled motor is 20% lower than continuous power of the combined cooled motor. The peak power is the same. Data is presented in the Technical Data Table.



## EMRAX 268 Technical Data Table (dynamometer test data)

Type Technical data		EMRAX 268 High Voltage	9	Ν	EMRAX 268 ⁄ledium Voltag	e	EMRAX 268 Low Voltage or EMRAX 268 Low Voltage**			
Air cooled = AC Liquid cooled = LC Combined cooled = Air + Liquid cooled = CC	AC	LC	сс	AC	LC	сс	AC	LC	сс	
Ingress protection	IP21	IP65	IP21	IP21	IP65	IP21	IP21	IP65	IP21	
Cooling medium specification (Air Flow = AF; Inlet Water/glycol Flow = WF; Ambient Air = AA) If inlet WF temperature and/or AA temperature are lower, then continuous power is higher.	AF=20m /s; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s; AA=25°C	WF=8I/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	
Weight [kg]	19,9	20,3	20,3	19,9	20,3	20,3	19,9	20,3	20,3	
Diameter ø / width [mm]					268/91					
Maximal battery voltage [Vdc] and full load/no load RPM	700 \	/dc (3200/380	0 RPM)	680 V	dc (4700/5500	RPM)	130 Vdc (2300/2900 RPM) 250 Vdc (4500/5500 RPM)			
Peak motor power at max RPM (few min at cold start / few seconds at hot start) [kW]		160			230		115 (at 230	0 RPM load); 2 RPM load)	20 (at 4500	
Continuous motor power (at 2000-4000 RPM) depends on the motor RPM [kW]	40 - 75	40 - 80	50 - 85	40 - 80	40 - 90	50 - 110	40 - 75	40 - 80	50 - 90	
Maximal rotation speed [RPM]			4	1500 RPM (550	00 RPM peak fo	or a few secon	ds)			
Maximal motor current (for 2 min if it is cooled as described in Manual) [Arms]		270			400		1000			
Continuous motor current [Arms]		125		190			500			
Maximal motor torque (for a few seconds) [Nm]		500								
Continuous motor torque [Nm]		250								
Torque / motor current [Nm/1Aph rms]		2,0		1,4			0,5			
Maximal temperature of the copper windings in the stator and max. temperature of the magnets [°C]					120					
Motor efficiency [%]				92 - 98						
Internal phase resistance at 25 $^{\circ}\text{C}\left[\text{m}\Omega\right]$		26		11,5			1,7			
Input phase wire cross-section [mm <sup>2</sup> ]		10,2		15,2			38			
Wire connection				star						
Induction in Ld/Lq [µH]		292/273			126/118		17/15,9			
Controller / motor signal					sine wave					
AC voltage between two phases [Vrms/1RPM]		0,2320		0,1520			0,0560			
Specific idle speed (no load RPM) [RPM/1Vdc]		5,4		8,2			22,2			
Specific load speed (depends on the controller settings) [RPM/1Vdc]		4,5 - 5,4		7 – 8,2				18 - 22,2		
Magnetic field weakening (for higher RPM at the same power and lower torque) [%]					up to 100					
Magnetic flux – axial [Vs]		0,1014			0,0664			0,0245		
Temperature sensor in the motor					kty 81/210					
Number of pole pairs					10					
Rotor inertia (mass dia=195mm, m=9,8kg) [kg*cm²]					932					
Bearings (front:back) – SKF/FAG	6206:620 air pro	6 (for radial fo peller) or 620	rces) or 6206: 6:3206 (for ax	7206 (for axial ial-radial force pos	-radial forces; f s; for pull-push ssible (exceptio	for pull mode; n mode; »O« o nally)	tocusing on ve rientation, α=2	ery high axial lo 25°); other bea	ad , e.g. for rings are	
EMARX 268 Very High Mechanical Loads (VHML)	6207:620 air pro	)7 (for radial fo peller) or 720	orces) or 6207: 6:3207 (for ax	7207 (for axial ial-radial force pos	-radial forces; s; for pull-push ssible (exceptio	for pull mode; n mode; »O« o nally)	focusing on verticentation, $\alpha = 2$	ery high axial lo 25°); other bea	oad, e.g. for rings are	



\*EMRAX 268 VHML Low Voltage version always has 2 sequences of phase connectors (2x UVW).

\*\*Controller for EMRAX 268 Low Voltage motor should have very high peak and continuous motor current (1000 Arms peak and 500 Arms continuous). It is difficult to find such a high current controller in the global market. The most suitable is emDrive 500 from the Emsiso Company, which has 500 Arms continuous and 800 Arms peak motor current. Another possibility to get a high enough motor current is to connect 1 motor with 2 controllers by using 2 set of phase connectors (2x UWV) on the motor.

#### Graphs valid for EMRAX 268 High Voltage Combined Cooled (CC):

Graphs were made from tests, which were made by Letrika d.d. in 2014. The motor was tested only up to 400 Nm of torque, because the opposite generator on the test bench generated only 400 Nm of torque. DC voltage from the batteries was only 400 V, so we were able to run the EMRAX motor only at lower speed than the maximal motor speed. The motor was also tested with magnet field weakening setting in the controller – in this case we achieve significantly higher speed at the same power. Water/glycol flow was only 3,5 l/min, but it must be 6-8 l/min as it is written in the Technical Data Table.













#### Graphs of the EMRAX 268 Medium and Low voltage motor type:

Graphs of EMRAX 268 Low Voltage and EMRAX 268 Medium Voltage are similar to graphs of EMRAX 268 High Voltage. The only differences are in the DC voltage and motor current. These two parameters can be read from the Technical Data Table for the EMRAX 268 Low and Medium Voltage motor.

Low Voltage motor needs 4 x higher current and 4 x lower DC voltage for the same power/torque and RPM, compared to the EMRAX 268 High Voltage motor.

<u>Medium Voltage</u> motor needs 1.52 x higher motor current and 1/3 lower DC voltage for the same power/torque and RPM, compared to the EMRAX 268 High Voltage motor.

#### Graphs of the EMRAX 268 Liquid cooled (LC) and EMRAX 268 Air Cooled (CC):

Continuous power of the liquid cooled or air cooled motor is 20% lower than continuous power of the combined cooled motor. The peak power is the same. Data is presented in the Technical Data Table.



### **EMRAX 348 Technical Data Table**

It will be available for sale at the end of 2016. Orders are being collected.

Technical Type		EMRAX 348 High Voltage		EMRAX 348 Medium Voltage			EMRAX 348 Low Voltage		
Air cooled = AC Liquid cooled = LC Combined cooled = Air + Liquid cooled = CC	AC	LC	сс	AC	LC	cc	AC	LC	сс
Ingress protection	IP21	IP65	IP21	IP21	IP65	IP21	IP21	IP65	IP21
Cooling medium specification (Air Flow = AF; Water/glycol Flow = WF – if inlet water/glycol temperature and/or ambient temperature are lower, then continuous power is higher)	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	AF=20m/s ; AA=25°C	WF=8l/mi n at 50°C; AA=25°C	WF=8l/mi n at 50°C; AA=25°C
Weight [kg]	39	40	40	39	40	40	39	40	40
Diameter ø / width [mm]					348/107				
Maximal battery voltage [Vdc] and full load/no load RPM	800 V	dc (1800/2200	RPM)	800 V	dc (2800/3400	RPM)	130 Vo 340 V	dc (1200/1500 /dc (3200/400	0 RPM) 0 RPM)
Peak motor power at max RPM (few min at cold start / few seconds at hot start) [kW]		190			290		125 kW 330 kW	(at 1200 RPM (at 3200 RPM	l load #) load ##)
Continuous motor power at load RPM [kW]	90	100	100	140	150	170	70 at #; 170 at ##	70 at #; 180 at ##	80 at #; 200 at ##
Maximal rotation speed [RPM]		4000 (with maximal battery voltage or magnetic field weakening)							
Maximal motor current (for 2 min if it is cooled as described in Manual) [Arms]		280		450			1100		
Continuous motor current [Arms]	140			210				550	
Maximal motor torque (for a few seconds) [Nm]					1000				
Continuous motor torque [Nm]					500				
Torque / motor current [Nm/1Aph rms]		3,8			2,5			0,9	
Cogging torque [Nm]					5				
Maximal temperature of the copper windings in the stator and max. temp. of the magnets [°C]					120				
Motor efficiency [%]					92 - 98				
Internal phase resistance at 25 $^{\circ}\text{C}\left[\text{m}\Omega\right]$		32		14			5		
Input phase wire cross-section [mm <sup>2</sup> ]		10,2		15,2			38		
Wire connection					star				
Induction in Ld/Lq [µH]		418/452			180/195		24,3/26,3		
Controller / motor signal					sine wave				
AC voltage between two phases [Vrms/1RPM]		0,2320			0,1520			0,0560	
Specific idle speed (no load) [RPM/1Vdc]	2,8				4,3			11,8	
Specific - load speed (depends on the controller settings) [RPM/1Vdc]	2,3 – 2,8				3,5 – 4,3			9,5 – 11,8	
Magnetic field weakening (for higher RPM at the same power and lower torque) [%]		up to 100 %							
Magnetic flux – axial [Vs]	N/A N/A							N/A	
Temperature sensor in the motor					kty 81/210				
Number of pole pairs					10				
Rotor inertia (mass dia=270 mm, m=20kg) [kg*cm²]					N/A				
Bearings (front:back) – SKF/FAG		600	9:6009 (for ra	dial forces) for axial-radial forces contact EMRAX Company					

\*Controller for EMRAX 348 Low Voltage should have very high peak and continuous motor current (1100 Arms peak and 550 Arms continuous). It is difficult to find such a high current controller in the global market. The most suitable would be the emDrive 500 from the Emsiso Company, which has 500 Arms continuous



and 800 Arms peak motor current. Another possibility to get a high enough motor current is to connect 1 motor with 2 controllers by using 2 set of phase connectors (2x UWV) on the motor.

## 2. Intended usage of the EMRAX motor/generator

Before selling the EMRAX motor, every EMRAX is tested at standard ambient and motor cooling conditions (described in Technical Data Tables) in our Company, operating as a generator and as a motor with the Unitek GmbH BAMOCAR D3 controller.

The drive is built according to the state of the art and approved safety-related rules. However, dangerous situations for the user or other parties as well as damages to the device or other material assets can arise.

Only use the system in technical soundness, safety-conscious, according to the intended usage and be aware of dangers! Especially faults that can affect safety should be cleared immediately!

Do not to use the motor in direct salt environment.

Avoid full throttle idle running at higher voltages. Speed (motor rotation) must be limited by the controller SW according to the Technical Data Table for each EMRAX type.

The EMRAX motor must be used in accordance with the ambient and motor cooling conditions, which are described in the **Technical Data Table for each EMRAX motor type**, otherwise the warranty does not apply.

## 3. Motor types and additional motor parts

The EMRAX motor family consists of 5 different motor sizes: 188 mm, 208 mm, 228 mm, 268 mm and 348 mm diameter. Each motor size can be air, combined or liquid cooled and each of them can also be made for high, medium or low voltage.





#### User's Manual for Advanced Axial Flux Synchronous Motors and Generators



Version 4.2 / October 2016







- For power/torque transmission from front and back motor side.



#### User's Manual for Advanced Axial Flux Synchronous Motors and Generators





## 4. Order codes, tariff (HTS) codes, weights of EMRAX motors and additional motor parts

Sample of order code: EMRAX	228 HV L	LC(IP65)	R LTN 180

Item code:	Explanation:	Weight (kg)	Tariff (HTS) codes and description
EMRAX	Motor name		
188 / 208 / 228 / 268 / 348	Motor diameter in mm		
LV / MV / HV	Voltage type (Low Voltage / Medium Voltage / High Voltage)		
LC(IP65) / CC(IP21) / AC(IP21)	Liquid Cooled (IP65) / Combined Cooled (IP21) / Air Cooled (IP21)	7 / 9 / 12 / 20 / 40	8501.52.9; electric motor
R	Bearings for radial forces.	and 348 will	
Р	Front bearing is for radial forces. Back bearing is for axial-radial forces, focusing on very high axial load. Bearing combination is for <b>pull mode</b> . For e.g. air propeller.	sale in the	
РР	Front bearing is for radial forces. Back bearing is for axial-radial forces. Bearing combination is for <b>pull-</b> <b>push mode</b> .	ena oj 2010.	
2xUVW	2 sequences of phase connectors (6 motor phases). When using one motor with two controllers to get a high enough current.		
VHML	Bearings and motor shaft made for Very High Mechanical Loads (VHML). Stronger bearings and stronger shaft. Possible only for EMRAX 268.		
LTN(back)	Resolver LTN RE-15-1-A15 (e.g. for Unitek Bamocar D3 controller) with bracket mounted on back side of the motor.	0,2	9031.80.98;
LTN(front)	Resolver LTN RE-15-1-A15 (e.g. for Unitek Bamocar D3 controller) mounted on the front motor side by a special bracket. This bracket has to be connected with X shape bracket, which is mounted on the back motor side. Special bracket, X shape bracket and connecting parts are included.	0,3	position sensor



#### User's Manual for Advanced Axial Flux Synchronous Motors and Generators

TLTN	Tandem resolver LTN RE-15-1-A15 (e.g. for two Unitek Bamocar D3 controllers) with bracket mounted on the back side of the motor. For EMRAX TWIN (mounted on back side of the second motor) and when using two controllers with one motor (in this case two sequences of phase connectors are needed; 2xUVW).	0,3	
RLS RM44SC(back)	Encoder RLS RM44SC (SSI; e.g. for Emsiso controller) with bracket mounted on back side of the motor.	0,2	
RLS RM44SC(front)	Encoder <b>RLS RM44SC</b> (SSI; e.g. for Emsiso controller) mounted on the front motor side by a special bracket. This bracket has to be connected with X shape bracket, which is mounted on the back motor side. Special bracket, X shape bracket and connecting parts are included.	0,3	
RLS RM44AC(back)	Encoder RLS RM44AC (sin-cos; e.g. for Sevcon controller) with bracket mounted on back side of the motor.	0,2	
RLS RM44AC(front)	Encoder RLS RM44AC (sin-cos; e.g. for Sevcon controller) mounted on the front motor side by a special bracket. This bracket has to be connected with X shape bracket, which is mounted on the back motor side. Special bracket, X shape bracket and connecting parts are included.	0,3	
HS	Hall Sensors mounted inside the motor. Suitable for some other controllers; cable length is app 1m).	0,2	
180	Coolant fittings - <b>180°</b> (straight tubes). Two in one package (for 1 motor).	0,1	7411.21.90;
90	Coolant fittings - <b>90°</b> (angular tubes). Two in one package (for 1 motor).	0,1	fittings
ESO	<ul> <li>Extended motor Shaft with Outer splines comes out from back motor side (mounted in the motor during assembly). Possibilities for mounting the sensors: <ul> <li>Resolver / encoder should be mounted on the front motor side by a special bracket, which can be ordered at EMRAX Company.</li> <li>Resolver / encoder can be mounted on the tailored elongated shaft (adapter shaft), which is added to ESO. Resolver / encoder is mounted after drive wheel (for pulley, chain etc.) at the end of adapter shaft by tailor made bracket, which has to be provided by a customer.</li> <li>A special resolver / encoder with bigger internal diameter of the rotor can be mounted on the ESO. This special sensor* has to be provided by a customer.</li> <li>Instead of resolver / encoder hall sensors can be used.</li> </ul> </li> <li>* Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting.</li> </ul>	1,1	
FSI	Flanged Shaft with Inner splines is mounted on front motor side.	0,6	
ESO and FSI	Extended motor Shaft with Outer splines comes out from back motor side (mounted in the motor during assembly) and Flanged Shaft with Inner splines is mounted on front motor side. In case both shafts are mounted in one motor: - Hall sensors should be used. - Resolver / encoder is mounted at the end of tailored elongated shaft (adapter shaft) after the drive wheel (for pulley, chain etc.) on the back or front motor side (on the FSO or ESO) by using a tailor made bracket. This adapter shaft and bracket have to be provided by a customer. - A special resolver / encoder with bigger internal diameter of the rotor can be mounted on the ESO. This special sensor* has to be provided by a customer. * Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting. In case of EMRAX TWIN: - In case using ESO in the second motor both motors should use hall sensors. - Tandem resolver (TLTN) or encoder can be mounted at the end of tailored elongated shaft (adapter shaft) after the drive wheel (for pulley, chain etc.) on the back or front motor side (on ESO or FSI) by a tailor made bracket. Tailored shaft and bracket have to be provided by a customer. - Special tandem resolver or encoder with bigger internal diameter of the rotor can be mounted on the ESO or FSI) by a tailor made bracket. Tailored shaft and bracket have to be provided by a customer. - Special tandem resolver or encoder with bigger internal diameter of the rotor can be mounted on the ESO. These special sensors* have to be provided by a customer. * Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting.	1,7	8483.10.95; shaft
x	X shaped iron bracket. For one motor 1 pc is needed. For EMRAX TWIN 2 pcs are needed.	1	7326.90.98; steel bracket



## 5. 3D drawings of EMRAX motors

EMRAX 3D drawings can be downloaded from www.emrax.com

## 6. Mounting the motor

Only use the drive if properly mounted on threaded bores intended for in the stator. Take a look at EMRAX drawings, where you can see mounting holes for each EMRAX model. EMRAX has an external rotor, which must not under any condition, not even for testing, be connected to the frequency converter or the power source, if the motor is not fixed in the manner described above. Propeller, Flanged Shaft with Inner Splines (FSI) some other drive shaft can be mounted on the front motor side with six M8 threaded bores intended for in the rotor. These screws must be screwed down into the rotor:

- at least 14 mm and not more than 15 mm for EMRAX 188 (M6 instead of M8 threaded boreholes)
- at least 15 mm and not more than 16,0 mm for EMRAX 208
- at least 15,5 mm and not more than 16,5 mm for EMRAX 228
- at least 17,5 mm and not more than 18,5 mm for EMRAX 268
- at least 27 mm and not more than 28 mm for EMRAX 348 (M10 instead of M8 threaded boreholes)



Figure 13: Mounting holes on front and back side of the motor



Figure 14: Mounting options (air propeller / in-wheel)



Brackets for mounting EMRAX motors are X shape brackets or they can be custom made. The X shape bracket is available for any motor size. It is made from stainless steel. Two X shape brackets can be connected together and used for mounting the EMRAX TWIN.

## 7. Power/torque transmission and shafts

Every EMRAX motor has a serially included standard shaft. In this case the power/torque must be transmitted by using flanged shaft on the front motor side. All shafts for EMRAX motors are hollow. Therefore EMRAX motors have trough-shaft mounting and stacking capability.

The motor power/torque transmission can be made from the front side and/or back side of the motor:

- If the power/torque transmission is <u>from front side of the motor</u>, then the Flanged Shaft with Inner splines (FSI) is needed. It can be ordered from the EMRAX Company or the customer provides it in case custom made splines are needed (inner, outer etc.). The shaft is mounted on the front motor side on six screws (M6/M8/M10 depends on the motor size).
- If the power/torque transmission is <u>from back side of the motor</u> the customer needs the Extended motor Shaft with Outer splines (ESO). It can be ordered from the EMRAX Company. If the custom made shaft is needed, the customer can provide it. In this case the extended motor shaft from back motor side must be sent to the EMRAX Company before the motor assembly (this shaft has to be made precisely for EMRAX motors according to drawings, which are sent to customer by email). Before sending the shaft the customer must contact the EMRAX Company.

<u>**!Note</u>:** If the extended shaft from back motor side is used the six screws (M6/M8/M10 – depending on the motor size) must be screwed down into the rotor on the front side of the motor, because they carry the torque from the rotor disks to the extended shaft. Screws must be screwed down in the rotor as it is described in Item 6.</u>

**<u>INote</u>**: If the power/torque transmission is from the back motor side ESO should be mounted in the motor during motor assembly. Possibilities for mounting the sensors in case of ESO:

- Resolver / encoder should be mounted on the front motor side by a special bracket, which can be ordered at EMRAX Company.

- Resolver / encoder can be mounted on the tailored elongated shaft (adapter shaft), which is added to ESO. Resolver / encoder is mounted after drive wheel (for pulley, chain etc.) at the end of adapter shaft by tailor made bracket, which has to be provided by a customer.

- A special resolver / encoder with bigger internal diameter of the rotor can be mounted on the ESO. This special sensor\* has to be provided by a customer.

- Instead of resolver / encoder hall sensors can be used.

\* Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting.

• If the motor power/torque transmission is <u>from the front and back motor side</u>, then the motor needs a flanged shaft with 6 inner splines (FSI) from the front motor side and an extended motor shaft (ESO) from back motor side. These shafts can be ordered from the EMRAX Company. If custom made shafts are needed, the customer can be provided with them – in this case the extended motor shaft from back motor side must be send to the EMRAX Company before the motor assembly (this shaft has to be made precisely for our motors according to drawings that are sent to the customer). Before sending the shaft the customer must contact the EMRAX Company.

<u>INote</u>: If the power/torque transmission is from front and back motor side ESO should be mounted during motor assembly and FSI should be mounted afterwards on the front motor side. Possibilities for mounting the sensors in case of ESO and FSI:

- Hall sensors should be used.

- Resolver / encoder is mounted at the end of tailored elongated shaft (adapter shaft) after the drive wheel (for pulley, chain etc.) on the back or front motor side (on the FSO or ESO) by using a tailor made bracket. This adapter shaft and bracket have to be provided by a customer.

- A special resolver / encoder with bigger internal diameter of the rotor can be mounted on the ESO. This special sensor\* has to be provided by a customer.
- \* Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting.



Figure 15: EMRAX transmission shafts



Figure 16: Standard motor shaft vs. extended shaft with outer splines (ESO)



Figure 17: ESO and FSI





Figure 18: Standard motor shaft vs. EMRAX 268 VHML shaft





In case using power/torque only from back side of the motor (ESO), 6 screws M8 from front motor side must be screwed down to carry the torque from rotor rings to the ESO.

EMRAX with Extended Shaft with Inner splines (ESO) and/or with Flanged Shaft with Inner splines (FSI)

Æ

35

16

Δ

16

Screws M8 must be screwed down 16mm (16,5mm max) into the AL/Fe

flange.

ESI

FLANGED SHAFT with 6 inner splines 5mr (FSI)

Figure 20: EMRAX with ESO and FSI

Version 4.2 / October 2016





Power/torque transmission from front motor side





Power/torque transmission from front and/or back motor side





#### User's Manual for Advanced Axial Flux Synchronous Motors and Generators



#### Figure 23: Power/torque transmission from front motor side to the transmission gear

The extended motor shaft and the standard motor shaft cannot be replaced once the motor is assembled.

Our shafts are made from hardened steel (42CrMo4).

If custom made shafts are needed, customer can provide a shaft, which must be made precisely according to EMRAX drawings. The customer can provide a motor shaft or an extended motor shaft. The shaft dimensions must be discussed with the EMRAX Company before sending the shaft and mounting it in the motor during assembly. The customer can also make a special flanged shaft for the motor (e.g. with special splines). Another option is to use standard torque adapter (globally available) and mount it in on the front side of the motor by using special brackets.



Figure 24: Motor with extended shaft from back motor side Version 4.2 / October 2016



## 8. Controlling direction, position and rotation speed of EMRAX motors

a) Drive control with sensor:

- For controlling <u>direction</u>, <u>position</u> and <u>rotation speed</u> of the motor a sensor should be used. Sensor types that can be used are: resolvers, encoders or hall sensors.

- Sensors must be used for e.g. electric vehicles and propellers that have to stop at the exact position (glider planes, where the propeller has to be put into the fuselage).

- Resolver/encoder has to be precisely mounted onto the motor by a special bracket. Hall sensors have to be mounted in the motor during assembly of the motor. Sensors with brackets can be ordered from the EMRAX Company, where they are also mounted. If sensors are not mounted in the EMRAX Company no warranty applies.

#### !Note:

- It is important that auto tuning (synchronising the electrical and mechanical motor angle) and pre-setting of controller software is done first.

- For every motor one sensor (encoder/resolver/hall) is needed if the motor is used with one controller. When one motor is used with two controllers (2 sequences of motor phase connectors – 2xUVW) then two sensors should be used (e.g. tandem resolver). This is when a very high motor current has to be ensured.

- For the EMRAX TWIN application two sensors (tandem resolver mounted on the second motor) and two controllers are needed. Some controllers (rare controllers) have an option to split the signal from two controllers in only one sensor (usually encoder), which is mounted on the second motor.

- For more information about sensors, please consult with the controller producers.



Figure 25: Resolver / encoder on back motor side





Figure 26: Resolver / encoder on front motor side



Figure 27: Encoder with bracket





Figure 28: Resolver with bracket



Figure 29: EMRAX with hall sensors

b) Drive control without sensor (sensor-less):

<u>Direction</u> of motor rotation (clockwise/counter clockwise) can also be defined without a sensor, if the controller has a sensor-less option. It can be defined by pole reversal, which can be achieved by a change of two motor phase cables. Three phase power connectors UVW are shown below in this Item. Position and rotation speed cannot be defined without a sensor.
 Sensor-less can be used for e.g. boats, airplanes and for applications that do not need a high torque at the start (applications with propellers).



## DRAX Los Voltage (LV) type Watage (LV) type DRAX Los Voltage (LV) type



Standard phase connectors (UVW), temperature sensor and option with hall sensors (HS).



Doubled phase connectors (2xUVW):

If EMRAX motor is used with two controllers. Especially for low voltage motors to achieve enough high current and in redundancy applications.

It is possible to parallel wire those connectors: U1-U1, V2-V2 and W3-W3 and run the motor like the motor with standard phase connectors (1xUVW). STAR CONNECTION

EMRAX 188, 208, 228, 268 and 348



Figure 30: Motor phase connectors – normal (UVW) and doubled (2xUVW)



## 9. Suitable controllers for EMRAX motors

Controllers have to be bought directly from the producers. The most suitable controllers for EMRAX motors are from the following companies:

- Unitek GmbH, Germany
- Emsiso d.o.o., Slovenia
- Sevcon Ltd., United Kingdom
- Reinhart Motion Systems LLC (RMS), USA

The controller has to be selected according to the Technical Data Table of each motor (high motor current and voltage is very important). For some EMRAX motor types it is difficult to find a suitable controller even in the global market. It is especially difficult to find a controller with enough high current, which enables low voltage motors performances listed in the Technical Ddata Tables. If the motor current is not high enough, then performances are inferior to the performances in the Technical Data Tables. For this reason two controllers can be used with one motor, therefore the motor can perform with its full performance. In this case the motor windings are wind in two phase sequences (2xUVW). The customer has to order doubled phase connector sequences on one motor when placing an order.

EMRAX motors should be used with the **sinusoidal commutation** controllers. If the controller with trapezoidal commutation is used, the motor would not work at its best performance, and it would also be louder.

Every motor is tested with the Unitek Bamocar D3 controller before dispatch. Stator windings are tested at 1500 Vac.

In the table below controllers are listed that are recommended for each motor type (performances of the motor should be calculated according to controller characteristics – current, voltage!):

Motor type	Recommended controller
EMRAX 188 High Voltage	Unitek; Sevcon
FMRAX 188 Medium Voltage	Emsiso emDrive 500
	Unitek; Sevcon
EMRAX 188 Low Voltage	Emsiso (2x emDrive 150 or 1x emDrive 500)
	Unitek (Bamocar D3 400 V)
EMRAX 208 High Voltage	Emsiso (emDrive H300)
	Sevcon; RMS
	Unitek (Bamocar D3 400 V)
EMRAX 208 Medium Voltage	Emsiso (emDrive H300)
	Sevcon; RMS
EMPAX 208 Low Voltage	Emsiso (emDrive 500)
LIVINAX 208 LOW VOItage	Sevcon; RMS
EMPAY 228 High Voltage	Unitek (Bamocar D3 700 V)
EIVINAN 228 High Voltage	Sevcon; RMS
	Unitek (Bamocar D3 400 V)
EMRAX 228 Medium Voltage	Emsiso (emDrive H300)
	Sevcon; RMS
	Emsiso (emDrive 500)
EIVIRAX 228 LOW VOILage	Sevcon; RMS
	Unitek (Bamocar D3 700 V)
EMRAX 268 High Voltage	Emsiso (emDrive H300, for up to 450Vdc - for high torque at lower RPM)
	Sevcon; RMS
	Unitek (Bamocar D3 700 V)
EMRAX 268 Medium Voltage	Emsiso (emDrive H300)
	Sevcon; RMS
	Emsiso (emDrive 500 - only up to 130 Vdc $\rightarrow$ lower RPM $\rightarrow$ lower power or 2x
LIVINAN 200 LOW VOILage	emDrive H300)



	Unitek (2x Bamocar D3 400 V)
	Sevcon, RMS
EMPAX 248 High Voltago	Unitek (2x Bamocar D3 700 V)
LIVINAA 348 High Voltage	Sevcon; RMS
	Emsiso (emDrive H300 - only up to 450 Vdc🛛 lower RPM🖾 lower power)
EMRAX 348 Medium Voltage	Unitek (2x Bamocar D3 700V)
	Sevcon; RMS
EMRAX 348 Low Voltage	Emsiso (2x emDrive 500 - up to 1200 RPM)

<u>INote:</u> For the correct type of the controller consult with the controller producer – especially for Sevcon and RMS controllers.

Most controllers use sensors for controlling position, direction and rotation speed of the motor. If the controller has the sensorless option, then a sensor is not needed, but in this case only the direction of motor rotation can be defined (by changing positions of two phase cables). More information about sensors is written in Item 8.

#### **Recommended sensors for different controllers:**

- Most controllers can drive the EMRAX motor with encoder, 2 poles resolver or hall sensors. Sensors that are available from the EMRAX Company are (they are mounted on the motor by a special bracket or in the motor):

- LTN RE15\_1\_A15 (2 poles resolver) for Unitek Bamocar D3 controller
- **TLTN RE15\_1\_A15** (2 poles tandem resolver) for two Unitek Bamocar D3 controllers; when using two controllers with one motor (doubled phase connectors 2xUVW are needed) or for EMRAX TWIN
- **RLS RM44SC** (encoder) for Emsiso emDrive 500 and emDrive H300
- **RLS RM44AC** (encoder) for Sevcon controllers
- **HS SS411P** (three hall sensors; possibility of doubled hall sensors) for Emsiso controllers

- Some controllers (e.g. RMS) require 10 poles resolvers, which are more accurate and can deliver a better signal to the controller. Then the controller can deliver a better current commutation to the motor. These sensors are especially required for higher speeds. The 2 poles resolver can be replaced by the 10 poles resolver by using the same resolver bracket. 10 poles resolvers are much more expensive than 2 poles resolvers.

For more information about suitable sensors, consult with the controller producer.

Every sensor has to be mounted on the motor by a special bracket. If the resolver / encoder is bought from the EMRAX Company it is already precisely mounted on the motor by a special bracket when the customer receives the motor. Hall sensors are mounted in the motor during the motor assembly.

#### !Note:

- Controllers can usually deliver very high peak power and lower continuous power, especially if the controller is air cooled.

- Performance of the motor also depends on the controller boost current and voltage (especially peak).

- Batteries should have very high C (Current) rating – very high boost discharging current from the batteries at high motor load.

- For EMRAX TWIN application two sensors (tandem resolver mounted on the second motor) and two controllers are needed. Some controllers (rare controllers) have an option to split the signal from two controllers in only one sensor (usually encoder), which is mounted on the second motor.

- Separated EMRAX motors which are not connected together mechanically (are not on the same shaft), cannot be driven with one controller.

#### Motor RPM depends on battery DC voltage and magnetic field weakening:

Maximal battery DC voltage delivers maximal motor RPM which should not be exceeded. Take a look at specific load speed in the Technical Data Table – RPM/1Vdc. In the case of using the magnetic field weakening option in the controller settings the maximal motor RPM can be achieved even at lower DC voltage from the batteries.

#### Achieving higher RPM with magnetic field weakening (MFW):

Most controllers have an option to set the magnetic field weakening in the controller software program. This setting enables the motor to achieve higher RPM at the same battery voltage. All EMRAX motors can weaken the magnetic field up to 100%. In this case the rotation speed increases, but the power stays at the same level. Torque is lower at higher speed. Efficiency drops only for 1-2 %.



Magnetic field weakening can be set in the controller software. EMRAX motors have 10 pole pairs, therefore it is recommended to weaken the magnetic field 15-20% to achieve the best performance. With higher % of magnetic field weakening the motor can run faster with very good efficiency, which drops only for 1, 5% at 80% MFW. We recommend MFW only for a short time (few min in case of full motor power), because of a very high current phase between the motor and controller.

#### !Note:

Maximal motor RPM should not be exceeded. Maximal motor RPMs are listed in the Technical Data Tables for each motor type.
 EMRAX motor has 10 pole pairs, which results in very high motor rotation frequency, especially at higher motor speed.

Therefore the controller for an EMRAX motor has to be made for high rotation frequencies.

For example: at 6000 RPM the rotation frequency is 1000 HZ. Consequently, the controller must deliver a stable and smooth signal even at a high rotation frequency with high PWM. RPM = 60 \* Hz/PP.

## 10. Two same sized EMRAX motors connected serially (EMRAX TWIN) – stacking capability of EMRAX motors

Two same sized EMRAX motors can be connected serially – this is EMRAX TWIN. All EMRAX motor types can be connected into TWIN.



EMRAX TWIN (e.g. size 228) - two same sized wired serial (stacking capability of EMRAX motors)

The first motor has Extended Shaft with Duter splines (ESD). This shaft is connected to Flanged Shaft with Inner splines (FSI), which is connected to the second motor. At the front side of the first motor customer can add another FSI for sprocket or some custom made drive option. EMRAX TWIN needs two special original iron brackets (X-shape).

#### Figure 31: EMRAX TWIN drawing





Figure 32: EMRAX TWIN with encoder



Figure 33: EMRAX TWIN with tandem resolver



Figure 34: Coolant fittings for EMRAX TWIN

Parts for EMRAX TWIN:

- First motor needs the Extended shaft with outer splines (ESO)

- Second motor needs the Flanged shaft with inner splines (FSI)

- 2 pcs of X shape brackets made from stainless steel

- If direction, position and rotation speed of the motor need to be controlled sensors are needed (more information in Item 8). Sensors that can be used are: tandem resolver (two resolvers wired serially – recommended), one encoder if the controller has an option to split the signal (rare controllers) or hall sensors in every motor. For more information about sensors, please consult with controller producers.



Possibilities for mounting the sensors in case of EMRAX TWIN:

- In case using ESO in the second motor both motors should use hall sensors.

- Tandem resolver (TLTN) or encoder can be mounted at the end of tailored elongated shaft (adapter shaft) after the drive wheel (for pulley, chain etc.) on the back or front motor side (on ESO or FSI) by a tailor made bracket. Tailored shaft and bracket have to be provided by a customer.

- Special tandem resolver or encoder with bigger internal diameter of the rotor can be mounted on the ESO. These special sensors\* have to be provided by a customer.

\* Resolvers / encoders with bigger inner diameter of the rotor are bigger and a lot more expensive. These bigger sensors also need more space for mounting.

The first motor is connected to the second motor by using the ESO shaft, FSI shaft and two X shape brackets. ESO and FSI shaft must be made by the EMRAX Company, otherwise the warranty does not apply.



Figure 35: EMRAX TWIN shafts – ESO is mounted in the first motor and FSI on the front side of the second motor



Figure 36: Motor with extended shaft and flanged shaft on the extended shaft (for EMRAX TWIN)

### 11. Redundancy

2 options:

- EMRAX TWIN, which needs to be driven with two controllers and needs a tandem resolver (TLTN) or hall sensors in every motor. In case of one controller/motor failure the others are still working.

- One EMRAX motor can be driven with two controllers. In this case the EMRAX motor needs doubled phase connectors (2xUVW). In case of one controller failure, the other still drives the motor (performances are lower). Sensors: tandem resolver (TLTN) encoder if the controller can split the signal or doubled hall sensors.

Redundancy may be considered for airplane applications.



## 12. EMRAX motor working as a generator and its integration into the hybrid system

EMRAX motors can be used as generators for electricity production. The same performance characteristics can be achieved in the motor and generator modes of operation. Technical data and graphs for the generator application are the same as for the motor application if the generator is <u>driven by the controller</u>. In case the generator is driven without a controller the power / torque is approximately 50% lower, because there is no control of the correct electrical-mechanical angle at load. Also an additional controller for converting generator three phase alternating signal to grid signal (230V/50Hz) is needed.

The EMRAX motor can be used in a hybrid propulsion system as a generator, which generates energy and charge the batteries in regeneration mode by using the controller and battery management system (BMS). The controller and BMS at the same time drive the diesel engine on the right power/RPM for charging the batteries at optimal level. At the end of charging they also balance the battery cells and turn off the diesel engine. Emsiso emDrive controllers and BMS system from the REC Company, can be done in Slovenia.

## 13. EMRAX motor ingress protection (IP CODE)

- IP21:
  - a) Air Cooled (AC): only air cooled
  - b) Combined Cooled (CC): air and liquid cooled (water/glycol mixture)



IP65:

Figure 37: EMRAX IP21

<u>Liquid cooled (LC)</u>: Totally closed motor. Dimensions and weight of this motor are the same as for EMRAX with IP21. Continuous power / torque are up to 20% lower, peak is the same compared to EMRAX with IP21.





Figure 38: EMRAX IP65

## 14. Motor cooling

It is important to enable sufficient cooling of the motor at any time. In every case, the temperature sensor that is mounted in the controller must be connected to the controller. This sensor protects the motor from overload. In case temperature is too high and not stable the controller drives the motor with lower current until the temperature becomes stable under the limit. The standard temperature sensor mounted into the motor is KTY 81-210. Other types can be mounted (e.g. PT1000) if the customer consults with the EMRAX Company in advance. EMRAX motors can be air cooled (IP21), liquid cooled (IP65) or combined cooled (IP21).



Figure 39: Motor cooling options





Figure 40: Motor coolant fittings for one motor

EMRAX motors have to be used under ambient and motor cooling conditions, which are described in the Technical Data Tables. Failure to comply with these conditions will void the warranty.

- The EMRAX motor must not exceed the temperature below -30°C and above 120°C on cooper windings and on the magnets. These values are also valid for the bearings. If the temperature exceeds these values, it causes a void of warranty. The indicator for exceeded temperature is placed in the motor. In case of disconnection of the temperature sensor, which has to be on the cooper windings, the controller has to stop the motor. The motor temperature sensor detector in the controller must always be enabled, during motor operation. The temperature sensor in the motor only measures the temperature of the stator, not the temperature of the magnets, consequently the magnets' temperature (outer/surface temperature of the motor) has to be measured with the thermal camera. It must be considered that the surface temperature is lower compared to the magnet temperature difference is approximately 10-20 °C (depends on the load).
- IP21 motor:

#### • EMRAX Air Cooled AC (air cooled):

Fresh air has to be served to the drive symmetrically and sufficiently. Air speed must be <u>20 m/s at maximal</u> <u>25°C air temperature and at maximal 200 kPa pressure</u>. This has to be ensured by intake ports or other air conduction measures. The motor can be protected with some net against the dirt.

#### • EMRAX Combined Cooled CC (air and liquid cooled):

Liquid cooling flow must be <u>6 to 8 litres per minute at maximal 50 °C inlet water/glycol temperature and</u> <u>ambient air temperature has to be 25°C or less</u>. Inlet water/glycol temperature and ambient temperature can also be lower – in this case the continuous motor power is higher. This is valid for all EMRAX motor sizes.

To achieve a good inlet water/glycol flow rate which is recommended (from 6 to 8 l/min) the inlet pressure for the different motor types must be:

Motor size	Water/glycol flow pressure (pressure drop)	Water/glycol flow rate
188 CC	0,5 bar	7 l/min
208 CC	0,6 bar	7 l/min
228 CC	0,9 bar	7 l/min
268 CC	1,0 bar	6 l/min
348 CC	1,0 bar	6 l/min

#### !Note:

- Maximum inlet water/glycol flow pressure must not exceed 2 bars.

- Inlet water/glycol flow pressures are valid if the tube length between the motor coolant fittings and the pump is up to 2 meters (diameter is 12 mm). If the tube is longer higher pressure in accordance with the pressure drop must be used.

- For the combined cooled motor it is important that beside liquid cooling also air cooling\_is assured – this means that the air around the motor must be exchanged (air circulation) and that the ambient air temperature must be 25°C or less (as described in the Technical Data Tables) to achieve the best motor performance.

- The motor must not be closed into some box without possibility of exchanging air. Liquid cooling is important for the stator, air cooling is important for the rotor. The motor can be protected with some net against the dirt.



Liquid flow must be filtered through the filter which openings' diameter or diagonal must not exceed 2 mm.
We recommend original coolant fittings, which have a special O sealing ring. If the tubes are sealed with some other sealing material, we do not guarantee that the system is waterproof.

- We do not recommend cooling the motor with salt water, because long-term exposure of the motor cooling system might lead to mineral deposits. Therefore we recommend a heat exchanger. Motors were not tested in a salt environment and cooled with salt water.

#### IP65 motor:

#### • EMRAX Liquid Cooled LC (liquid cooled):

This motor is totally closed. Liquid cooling flow must be <u>6 to 8 litres per minute at maximal 50 °C inlet</u> <u>water/glycol temperature and ambient air temperature has to be 25°C or less</u>. Inlet water/glycol temperature and ambient temperature can also be lower – in this case the continuous motor power is higher. This is valid for all EMRAX motor sizes.

To achieve good inlet water/glycol flow rate the recommended (from 6 to 8 l/min) inlet pressure for the different motor types must be:

Motor size	Water/glycol flow pressure (pressure drop)	Water/glycol flow rate
188 LC	0,5 bar	7 l/min
208 LC	0,6 bar	7 l/min
228 LC	0,9 bar	7 l/min
268 LC	1,0 bar	6l/min
348 LC	1,0 bar	6 l/min

#### !Note:

- Maximum inlet water/glycol flow pressure must not exceed 2 bars.

- Inlet water flow pressures are valid if the tube length between the motor coolant fittings and the pump is up to 2 meters (diameter is 12 mm). If the tube is longer higher pressure in accordance with the pressure drop must be used.

- Even though the motor is liquid cooled only the ambient temperature is an important factor for achieving high constant power. The ambient temperature must be 25°C or less (as described in Technical Data Tables).

- The motor must not be closed into some box without the possibility of exchanging air.

- Liquid flow must be filtered through the filter which openings' diameter or diagonal must not exceed 2 mm.

- We recommend original coolant fittings, which have a special O sealing ring. If the tubes are sealed with some other sealing material, we do not guarantee that the system is waterproof.

- We do not recommend cooling the motor with salt water, because long-term exposure of the motor cooling system might lead to mineral deposits. Therefore we recommend a heat exchanger. Motors were not tested in a salt environment and cooled with salt water.

## 15. EMRAX motor materials, quality and reliability

EMRAX motors are quality made and consist of quality advanced materials. Materials are able to withstand extremely high power / torque (high temperature resistant, shatterproof, stiff) and are corrosion resistant.

Stator part, outer ring, front and rear disk are made of aluminium quality 6082. Minimum aluminium thickness is 3.0 mm which is on the outer ring. The outer ring, front and rear aluminium disk are anodized in black.

Even though rotors with magnets represent approximately 40% of the motor weight, the direction of motor rotation can be changed in a fraction of a second. This is possible due to a very high quality motor shaft, which is made from hardened steel (42CrMo4) and quality bearings, which are chosen for long time duration.

Stator with cooper windings has an additional epoxy coating.

Magnets have a UH grade 180°, which means they are resistant up to 180°C. They are chemically and mechanically fixed to perfection, therefore EMRAX motors are very reliable. EMRAX motors are sold to the airplane industry where reliability is



extremely important. Due to adequate fixation of the magnets and quality advanced materials as well as motor design, EMRAX motors can be rotated even up to 8000 RPM (EMRAX 188 and 208 types).

The generator voltage of EMRAX may vary for 1-2% at the same rotation speed. This is due to the difference of the magnetic field of the magnets (tolerance 1-2%). The difference in voltage also depends on the other materials of the motor.

## 16. EMRAX motor bearings and life expectancy

Bearings of the rotor are not qualified for forces higher than bearings of the EMRAX motors included can transfer. Bearings used are FAG or SKF models, which are listed in the Technical Data Tables for every EMRAX type and in Item 3. All technical information about listed bearings is publicly available.

Every EMRAX motor includes two bearings – front and back. The distance between the front and back bearing can be measured from drawings. The bearing type depends on the load (direction and amplitude of the force applied on the motor shaft).

Bearings for EMRAX motors are listed in the tree structure of Item 3 and in the table below this paragraph. Bearing types, which are described, are used for most applications. If special bearings are needed (e.g. for in-wheel application), customer must consult with the EMRAX technical support before placing an order. Bearings are mounted in the motor during motor assembly. The bearing type must be calculated and selected by customer.

	Bearings for EMRAX motors (FAG bearings)		
EMRAX motor size	For radial forces (standard) (R)	For radial-axial	
		For pull mode (P)*	For pull-push mode
			("O" orientation) (PP)**
208 / 228 / 268	6206:6206	6206:7206	6206:3206
268 VHML	6207:6207	6207:7207	6207:3207
348	6009:6009	on request	on request

\* Front bearing is for radial forces. Back bearing is for axial-radial forces, focusing on very high axial load. Bearing combination is for pull mode. Suitable for e.g. air propeller.

\*\* Front bearing is for radial forces. Back bearing is for axial-radial forces. Bearing combination is for pull-push mode.



Figure 41: Combinations of bearings for EMRAX motors

To choose the correct bearings, the calculator on the link below should be used. Size of the bearing must be correct (according to EMRAX motor drawings). We offer FAG and SKF bearings.



## To check if the bearing is suitable for forces applied on the shaft you can use publicly available <u>FAG bearing calculator</u>: <u>http://medias.ina.de/medias/en!hp.ec/1\_R\*0\*C</u>

- 1. First, enter the type of the bearing in the box on the right side (e.g. 6206).
- 2. New window opens with the search results. Choose the product (e.g. 6206-2z, which means that it is closed from the front and back side).
- 3. Now you can choose the *Calculation* tab.
- 4. Double click on *Loadcase 1* on the right side of the window.
- 5. In the window that opens enter the magnitude of axial force (F<sub>a</sub>), magnitude of radial force (F<sub>r</sub>), rotation speed and operating temperature. Click on the calculator icon in the top row (5<sup>th</sup> icon from the left). Under the picture of bearing you will see the rating life in hours.

Life expectancy of the EMRAX motor is the same as life expectancy of the bearings that are mounted in the motor. If the bearings are overloaded than the bearing life time is shorter. They can be replaced.

In case of doubt, the circumstances of operation shall be discussed with the manufacturer of the bearings or the EMRAX Company. If the radial or axial load is higher than the bearings can bear, then the system must have an additional shaft with stronger bearings (belt transmission, chain transmission, gear transmission, direct drive applications). The EMRAX Company can insert some customized bearings' combinations (e.g. with tapered rolling bearings with additional sealing rings). This has to be discussed by the EMRAX Company in advance.

A static redundant dimensioning caused by the thrust bearing must be avoided in any case. Certain resilience in the mount of the drive or the thrust bearing is satisfactory. Required is a clean rotation of the extension shaft. The shaft must be able to rotate smoothly and easily by hand after mounting.

Tapered bearings must be lubricated according to the bearings lubrication instructions from the bearing producer.

Bearings are mounted in the motor during assembly. They can be replaced only at the EMRAX Company. Any opening and/or bearing replacement not done by the EMRAX Company causes a void of warranty! Also opening an EMRAX motor can cause health damage. Therefore please avoid opening the motor.





When bearing for aixial-radial forces (for e.g. FAG 3206, FAG 3207 - "O" orientation) is used the outer ring of this bearing must be fixed with original encoder / resolver bracket or with other custom made part. Distance is 2 mm.



## 17. EMRAX motors as in-wheel motors

All EMRAX motor types can be used as in-wheel motors. Important considerations before placing an order are:

- Bearings selection according to forces applied on the shaft (torque, weight of the vehicle) – more information about bearings in Item 16.

- Motor shaft selection according to forces applied on the shaft (torque, weight of the vehicle) – more information in Item 7.

EMRAX motor for in-wheel application must be totally closed (IP65; Liquid cooled).

For most in-wheel applications EMRAX 268 VHML is appropriate. In every case forces that will be applied to the shaft and bearings should be discussed before placing an order.

In-wheel mounting options for EMRAX can be seen in Item 6.

## 18. Maintenance and protection of EMRAX motor against environmental disturbances

- The drive does not need any maintenance during lifetime. The lifetime of EMRAX motors is the same as the lifetime of the bearings that are included in each motor.
- However it has to be considered that no foreign objects at all can enter the interior of the drive. This is especially
  important for EMRAX motors with IP21 (Air Cooled and Combined Cooled). Furthermore, it is necessary to protect the
  motor from humidity, dirt, paint, glues, salt, iron particles, etc. If this is ignored, a proper functionality of the motor
  cannot be guaranteed and irreparable damages are possible. To prevent objects falling inside the motor (especially iron
  chips, iron fillings), the motor ventilation holes (ring and side holes) MUST be protected with some tape during the
  time the motor is being assembled into the system and during the time the drive is not in use. The drive must be



protected from these objects even when it is already mounted in the system (especially if the motors are mounted close to the ground and if there are iron particles). In this case the motor should be protected with some fine net in order for the cooling to remain sufficient at the same time! In the event a foreign object enters the motor, do not by any means simply keep on using the drive! In this case contact the EMRAX Company and explain what happened. Unintended handling leads to secondary damages. Opening or disassembling of the motor causes a void of warranty! Also for opening the motor, special tools are needed to prevent any damages to the motor and to the person who opens the motor. Opening of the motor must be avoided in any case. The EMRAX Company can remove the foreign object from the motor and also checks the interior of the motor at the same time as well as protects it again. Removing particles from the motor, inspection and protection of the stator costs approximately 190 euros per motor. The customer also has to pay shipping costs and duty costs that may incur.

- In case of damage, ship the drive back to the EMRAX Company for repairs. It is important, that you contact the EMRAX Company before sending the motor back.
- Keep magnetic memory cards or electronic devices out of the rotor's close range, because the alternating magnetic field can cause a delete of data. Be careful with medical devices (e.g. pacemakers) which are sensitive to alternating magnetic fields.

## **19. Starting EMRAX motor (connecting the motor with controller):**

- 1. Firstly, it is important to read the manuals for the EMRAX motors and for the controllers!
- 2. Be aware of the following safety instructions before starting:
  - It is essential to permanently check the loads driven by the motor for damages, cracks etc. The use of damaged loads can lead to heaviest injuries.
  - The frequency converter needs to be mounted jacked up, so that a vibration free use is unconditionally guaranteed. If this is not the case, vibrations can cause contact faults and furthermore the breakdown of devices. This may lead to damages to the electronic system or to components in its environment.
- 3. Connecting the EMRAX motor, controller and batteries:
  - Before starting, the right direction of rotation has to be checked and if necessary changed motor connectors UVW must be set according to the controller phase positions. UVW (1, 2, and 3) connectors of the motor are parallel to UVW output phases from the controller. If sensor (encoder / resolver / hall) is used it has to be properly connected to the controller. Instructions can be provided by the sensor producer or the controller producer. For connecting instructions of the RLS encoder / LTN resolver / hall sensors please contact the EMRAX Company.

The drive should be, if possible, directly connected to the frequency controller, without any inserted connectors. If this is not possible, only use high current capable, low-impedance, best quality connectors. Shoddy connectors lead to voltage peaks and can destroy the frequency converter. Oftentimes unplugging the connector can cause contact problems which may also lead to a destruction of the converter. We also recommend a main vacuum switch between the batteries and controller and a suitable DC fuse.



Figure 43: Straight connection of motor phase connectors to controller cables.





Figure 44: Angular connection of motor connectors to controller cables. Connections must be isolated with shrink hose!

- Only use high current connector systems between the motor, converter and the battery. The connectors have to be checked before every use. If the coating is used up, the internal discs and the jacks may be damaged or lose their resilience, and they have to be replaced.
- Shoddy or used up connectors are the most common reason for destructions of the drive, the controller and possible components around it.
- The electric connectors and cables must be connected professionally and have to be isolated with a shrink hose.



Figure 45: Isolation of electrical phase connectors with shrink hose

• Mixing up the polarity of the battery or a short circuit leads to a destruction of the drive and means an acute fire hazard and danger of life!



- The cables should be as short as possible. For longer cables the diameter of the cable must be bigger. Power cables must be shielded and distant enough from the communication cables.
- 4. Setting the controller software:
  - Basic controller software settings must be set in the controller software. Basic controller settings are published on our web site: link. These files are for the Unitek controller. Other controllers use similar parameters, which can be set by using these parameters and the Technical Data Table of the motor.
  - Afterwards auto-tuning must be made. This means automatic adjustment of electrical angle according to the mechanical rotor position. This is a very important step for proper operation of the engine! When auto-tuning starts the motor slowly rotates for 360 mechanical degrees. Every controller has different system for automatic adjustment of electrical angle, so make sure you read the manual of the controller or consult with the controller producer.
  - Now you can start the motor and adjust software parameters according to your application. Be sure you enter the parameters that are in accordance with the Technical Data Table! Otherwise it causes a void of warranty.

## 20. How to choose the correct EMRAX motor type for every application:

- First you need to know what RPM and torque you will need for your application. You have to make sure, that
  the desired RPM and torque (without transmission gear) do not exceed maximal RPM and torque listed in
  the Technical Data Table for the specific EMRAX motor. You also need to make sure, to consider the
  Torque/RPM graph! The torque also depends on the controller current of the motor, therefore the controller
  needs to have enough high phase current to get enough high torque.
- 2. In the Technical Data Table you can find Specific load speed (RPM/1Vdc). With this data you can calculate how many RPM you will get at desired battery voltage (Vdc) at load application. \*It is possible to achieve higher RPM with magnetic field weakening (MFW). You can use magnetic field weakening when torque is at maximal value. At magnetic field weakening the torque slightly decreases, but the RPM rises and consequently the power stays the same (take a look at the equation below). Magnetic field weakening can be set in the controller software. EMRAX motors have 10 pole pairs, therefore it is recommended to weaken the magnetic field for 15-20% to achieve the best performances. With higher % of magnetic field weakening the motor can run faster with very good efficiency, which drops only for 1, 5% at 80% MFW. We recommend MFW only for a short time (few min in case full motor power), because of a very high phase current between the motor and the controller.
- 3. Now you can calculate the power, using this equation:

$$P[kW] = n[RPM] * Mt[Nm] / 9550$$

At a lower RPM (motor rotation), you can expect lower motor power at the same torque. At a higher motor speed you can expect higher motor power at the same torque.

Mt.....torque [Nm]

P.....power [kW]

n.....motor rotation [RPM]

In case you need higher power we recommend you to increase battery voltage (Vdc) instead of increasing motor current – because cables with bigger diameter are needed and consequently the weight is bigger. It is better to use a High Voltage motor if you need higher speed (RPM).

4. Example for 228 MV:

Customer has battery voltage 365 Vdc at load.

Version 4.2 / October 2016



228 MV motor can deliver 11 to 14 RPM per 1 Vdc at no load. At full load it can deliver 11 RPM/1Vdc.

This means that you can get 365 [Vdc] \* 11 = 4015 [RPM] only. Therefore at 180 Arms peak from controller from Bamocar D3, the motor power is:

 $4015 [RPM] * 180 Nm \div 9550 = 75 [kW]$  This is the maximum which you can expect with this controller. If you

want more power you need higher dc voltage to get higher RPM and also higher motor current. You need app 280 Arms peak (which gives app 230 to 240 Nm of torque). So if you can increase the current you will be closer to 100 kW. But we recommended that you increase the battery voltage to get higher RPM and consequently higher power.

## 21. Usage of EMRAX motors for electric vehicles (EV)

#### How to calculate power and torque for EV?

1. First you have to calculate the torque that will be needed for the vehicle (torque on the wheels):

Example:

EV weight:	G = 1700 kg
Acceleration time from 0 km to 100 km/h (= 27,78 m/s ):	t = 5 sec

Acceleration:

$$a = v \div t = 27,778 m/s \div 5 s = 5,55 m/s^2$$

Force for acceleration:

 $F = 1700 \ kg \ * 5,55 \ m/s^2 \ = 9444,5 \ N$ 

Torque on the wheels (wheel diameter 0,64 m):

Mt = 9444,5 N \* 0,32 m = 3022,2 Nm

3000 Nm is a torque on the wheels, which is needed to accelerate the vehicle (EV weight is 1700 kg) from 0 km/h to 100km/h.

2. Now you need to consider the transmission gear (TG) ratio and calculate the torque:

Example:

Differential ratio is approximately 3:1, TG ratio is approximately 4:1. Therefore total ratio in the first gear is:

total ratio = 3 \* 4 = 12



For example, one EMRAX 228 motor can deliver 240 Nm peak torque and 120 Nm continuous torque. Therefore peak torque on the wheels in first gear is:

total peak torque on the wheels in first gear = 12 \* 240 Nm = 2880 Nm

In this case close to 3000 Nm of peak torque in first gear can be expected. In the second gear the torque is lower. Only higher gear can deliver higher and finally end speed of EV.

End speed also depends on the maximal battery voltage (Vdc) and magnetic field weakening (MFW) – more information in Item 9. Final EV speed can be even higher if magnetic field of the motor is weakened. This can be done in the controller settings. Power stays the same at higher speed. Power of EV is rising at higher speed because of the air drag.

EV needs enough high torque for starting EV and driving up the hill. 15% slope is minimal for torque calculation.

3. Torque, power calculation:

#### P[kW] = n[RPM] \* Mt[Nm] / 9550

At lower RPM (motor rotation), you can expect lower motor power at the same torque. At higher motor speed you can expect higher motor power at the same torque.

Mt.....torque [Nm]

P.....power [kW]

n.....motor rotation [RPM]

Very important considerations when calculation power and torque for EV:

- acceleration
- air drag at higher speed
- driving up the hill

Usually there is no need to add higher torque for climbing up the hill, because there is enough high torque in the first gear in the case of using TG. Only EV speed is lower. Normally we do not need to drive up the hill at full speed.

EV must start with good acceleration even at very low RPM or at zero speed. Therefore the most important are motor torque and reduction drive ratio (belt drive, chain drive, differential or transmission gear etc.).

#### Mounting options of EMRAX motor for electric car:

- In-wheel (in Item 6)
- On the differential
- In the transmission gear (TG).

Firstly, you should know how much torque you need on the driven wheels.



- 1.) If you use the transmission gear then one EMRAX 208 gives enough power: 1900 Nm peak / 900 Nm continuous in the first gear.
- 2.) EMRAX 228 mounted in the TG is better option. You can expect much better EV acceleration, also you will be able to drive up the hill at higher gear:
   3800 Nm peak / 1900 Nm continuous in the first gear .
- 3.) EMRAX 228 is useable for lighter EV if mounted directly on the differential: nearly 1000 Nm peak / 500 Nm continuous on the wheels at full range of motor RPM.
- 4.) EMRAX 268 is useable for heavier vehicles if mounted directly on the differential: approximately 1600 Nm peak / 800 Nm continuous on the wheels at full range of motor RPM.
- 5.) If EMRAX 268 is mounted in the TG, than you can expect very high torque: 6000 Nm peak / 3000 Nm continuous on the wheels at full range of motor RPM. You can also use EMRAX TWIN (torque/power is doubled). Peak torque means that the power lasts 1-2 minutes.

#### **Example of calculation for electric Audi ETT:**

Engine:	1x EMRAX 268 MV CC(IP21)
Differential gear ratio:	i = 2,65 (BMW differential)
EV weight:	G = 1500 kg
Peak / continuous motor torque:	500 Nm / 250 Nm
Wheel diameter:	D = 0,64 m
Battery capacity:	Qbat = 30 kWh

#### Acceleration:

Maximal torque on the front wheels:

Mw = 500 Nm \* 2,65 = 1325 Nm

Force that is needed for this torque:

$$F = M \div r = 1325 Nm \div 0.32 m = 4140.6 N$$

Acceleration is:

$$a = F \div m = 4140,6 N \div 1500 kg = 2,76 m/s^2$$

Acceleration time from 0 to 100 km/h (=27, 77 m/s):

$$t = v \div a = 27,77 \ m/s \div 2,76 \ m/s^2 = 10 \ s$$

#### Final EV speed:

Nominal DC battery voltage:	384 Vdc
Specific load motor speed:	7,5 RPM/1Vdc at full load



Maximal motor RPM according to specific load motor speed:

$$N_{mot} = 348 \, Vdc * 7,5 \, RPM / 1Vdc = 2880 RPM$$

Maximal wheel rotating at full load:

 $Nw = 2880 RPM \div 2,65 = 1087 RPM$ 

Circumference of the wheel:

$$Cr = 2 * 3,14 * 0,32 m = 2,01 m$$

Maximal EV speed without magnetic field weakening:

$$V_{max} = 1087 RPM * 60 * 2,01 m \div 1000 = 131,1 km/h$$

<u>INote:</u> Maximal EV speed can be much higher at the same power with magnetic field weakening (MFW). This setting can be made in the controller software.

#### Travel range with 30 kWh of battery capacity:

Average power, which is needed to drive EV approximately 100 km/h, is approximately 12 kW motor power. Therefore theoretically expected travel range is close to 250 km with one charging of the batteries. In practice the producer of the batteries does not recommend 100% discharging of the batteries, therefore 200 km is what can be expected in reality.

## 22. EMRAX Certificates

EMRAX motors are in the process of obtaining certificates. Until now the EMRAX motor obtained the EMC certificate (E26) – electromagnetic field testing. This means that the motor complies with essential protection requirements of 89/336/EEC. It is important for electric vehicles.

## 23. EMRAX disclaimer

The EMRAX Company does not assume any responsibility for difficulties, which are the result of inappropriate configuration, electric system structure and settings that are not in accordance with the latest version of the Manual for EMRAX motors. Every motor is tested before shipping at ambient conditions and parameters, which are described in the Technical Data Tables. If EMRAX motors are not used in accordance with this manual it causes a void of warranty. Products of the EMRAX Company have been developed for usage on electric vehicles, planes, boats, power plants. Company EMRAX assumes no liability in case a customer uses components for the purposes for which they have not been developed or tested, and especially not for the purpose of presenting a direct threat to human life or health. The EMRAX Company does not assume any responsibility for damages caused by using the motors for testing purposes in circumstances which differ from standard usage of the motor. Any responsibility of the EMRAX Company does not take any responsibility on damages, injuries or other consequential losses caused by product failure of the user or any third person.

General Terms and Conditions of the EMRAX Company are available here: www.emrax.com



## 24. Service

In case of a fault or damage, contact Company EMRAX:

EMRAX d.o.o. Pod hribom 4 1235 Radomlje Slovenia, Europe Phone: +386 8 2053850 E-mail: info@emrax.com Web site: www.emrax.com

We now wish you lots of fun and success with your high performance EMRAX engine.